

Clearlight® FS Mini Heater

User Manual



Clearlight®

A Full Spectrum Heater to enhance your experience

Types of Infrared Light

Near Infrared



The shortest wavelength which is absorbed just below the surface of the skin creating a sweat that promotes healing and revitalisation.

Mid Infrared

A longer wavelength that can penetrate deeper into the body's soft tissue increasing circulation, releasing oxygen to reach injured areas.

Far Infrared

The longest wavelength which penetrates the fat cells causing vasodilation, where the fat cells vibrate to expel toxins, and activate metabolic stimulation.

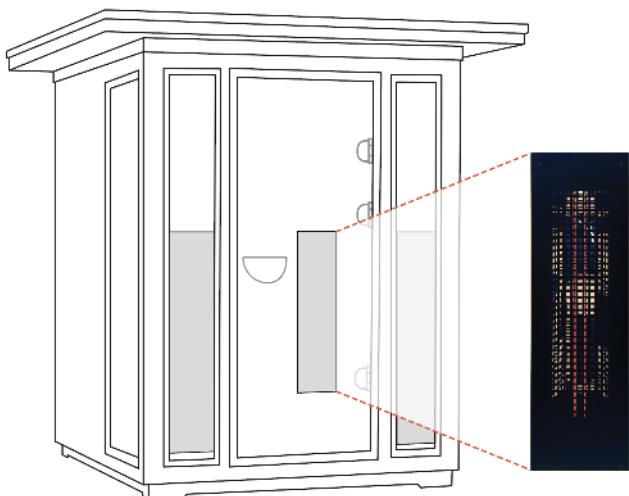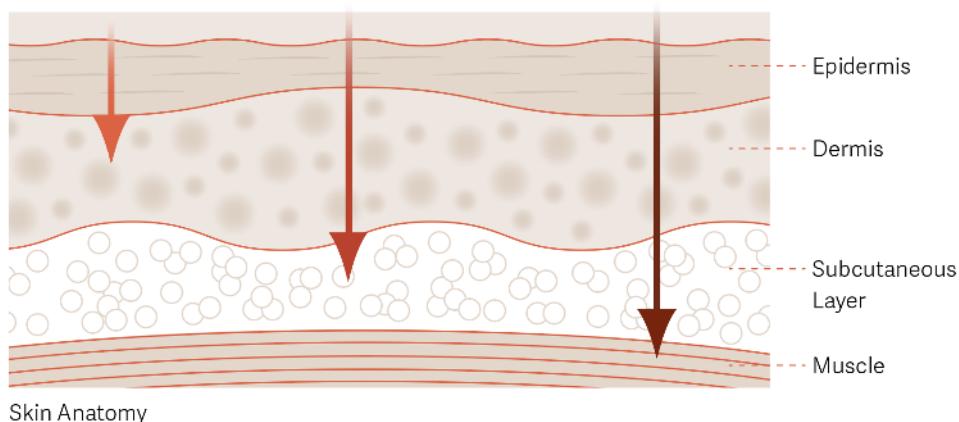

Full Spectrum Heaters

Maximize your potential for well-being with every session in your Clearlight® Infrared Sauna by adding one of our optional Full Spectrum Heaters to any Clearlight® Sauna model. Feel an additional 300 watts of deep penetrating near, mid and far infrared to soothe aching muscles, relax your body and take your sauna session to the next level.

Our door heater is designed to safely and securely plug into a special built-in receptacle in the front of your sauna. Every Clearlight® sauna has this feature built in at the factory to allow you to take advantage of this and any future upgrades as they are designed.


Installation Instructions

1 / Attaching your Clearlight® FS Mini Heater


(best done with 2 people)




Remove the existing metal plugs on your Clearlight® sauna glass door to reveal two holes.

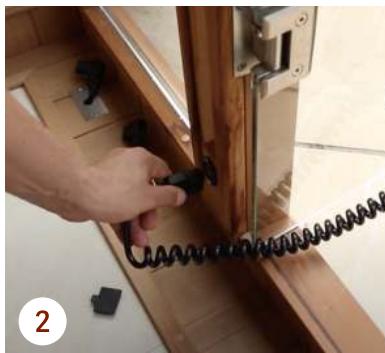

Connect your Clearlight® FS Mini Heater to the additional heater plug, located inside your sauna, on the right hand side near your glass sauna door.

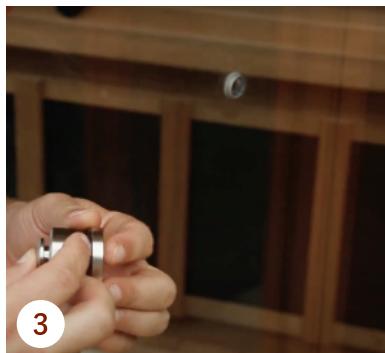

Holding the Clearlight® FS Mini Heater in place on the inside of the sauna, align the holes in the glass sauna door with the holes on the back of your Clearlight® FS Mini Heater.

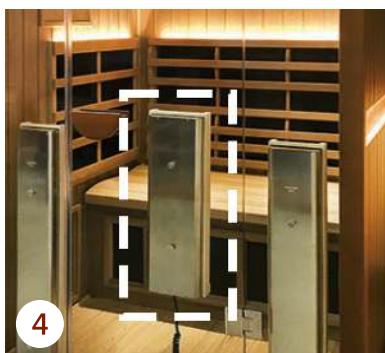


Insert & gently tighten the screws from the outside of the sauna to fasten the Clearlight® FS Mini Heater to the glass sauna door.


Installation Instructions

2/ Activating your Clearlight® FS Mini Heater


This activation step requires a set of keypad commands, and once activated your Clearlight® FS Mini Heater bulbs will instantly light up.

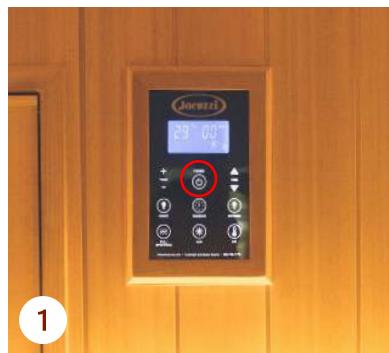


Turn on your Clearlight® Sauna by touching the **Power** button on your keypad.

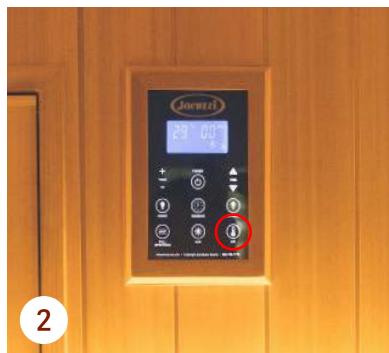

Turn your temperature display settings to **Celsius** by pressing the **F/C** temperature display button, changing it from Fahrenheit to Celsius.

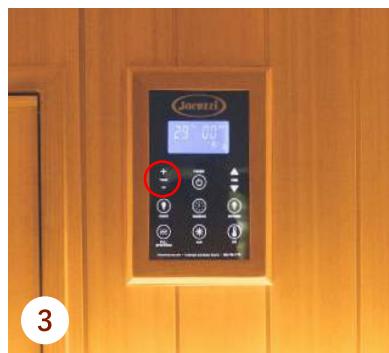

Using the **TEMP** buttons, ensure your Clearlight® Sauna is set to **60° Celsius**.

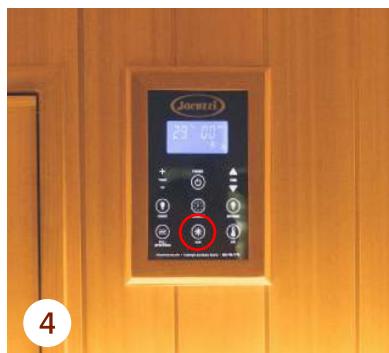

Hold down the AUX button immediately for 5 seconds before the temperature reverts and changes temperature display. You will hear a faint beeping sound. The heater should now light up red.

Installation Instructions

2a/ For older sauna models that don't have a Clearlight® logo keypad.

Sanctuary & Outdoor Models:

- ① Set the temperature in your Clearlight® Sauna to the max setting.
- ② Hold down the **Light** button for **10 seconds**.

Premier & Essential Models:

- ① Set the temperature in your Clearlight® Sauna to the **maximum** setting.
- ② Hold down the Inside & Outside Light buttons **simultaneously for five seconds**.